



Before collecting weight measurements with the xPIM Mobile Dimensioning App, you'll need to pair your xScale S200 via Bluetooth. The pairing process only takes a few moments and allows the app to automatically receive weight data from the scale.

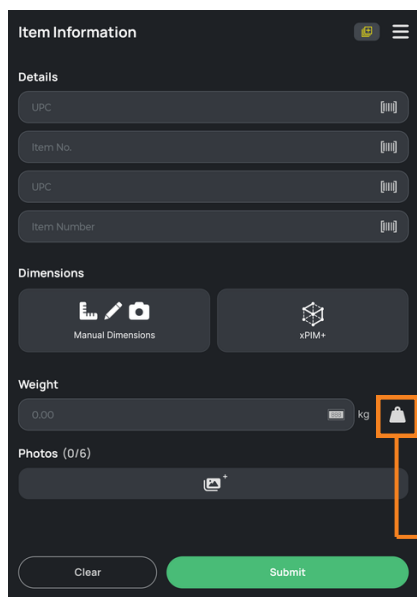

STEP 1

Open the xPIM Mobile Dimensioning App and navigate to the main data collection (Form View) screen.


In the Weight field, tap the Scale icon located to the right of the field.

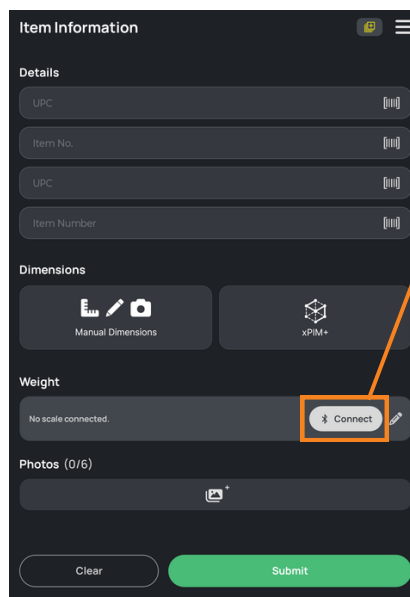

STEP 2

Open your xScale and tap Bluetooth Connect.

Alternatively, tap the Menu in the upper-right corner and select Pair xScale.

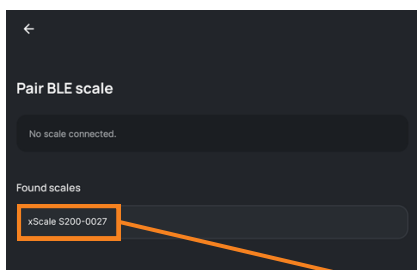


STEP 3

The Pair BLE Scale screen will open.

Select your xScale S200 from the list of discovered devices. Verify that the serial number matches the label on your scale.

NOTE: If your scale does not appear, power off the scale and back on by closing the scale and reopening it. Refresh or reopen the pairing screen.

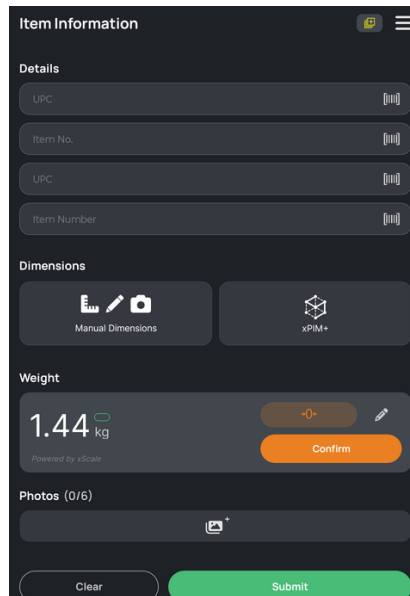

STEP 4

Once connected, exit the pairing screen and return to the main data collection (Form View) screen.

Your xScale S200 is now paired and ready to automatically capture weight measurements.

ADDITIONAL RESOURCES:



Scan QR Code for MobileDemand's
xPIM Quick Guide



Scan QR Code for MobileDemand's
**xPIM Forge Series Recommended
Android Setup Guide**